



Automatic Satellite TV Antenna for DISH®



VQ4500 & VQ4510 Quick Reference Guide

Thank you for choosing a KING Antenna!

The KING Tailgater Automatic Satellite System is designed to work with both standard and high definition satellite TV broadcasts from DISH satellites 110/119/129, and ONLY with the following DISH receivers:

ViP®211z • ViP211k • ViP211 • 411


For second receiver use, see your Owner's Manual.

If your RECEIVER is
NEW AND UNACTIVATED,
see the back of this guide first!



11200 Hampshire Avenue South, Bloomington, MN 55438
PH 952.922.6889 || FAX 952.922.8424 || kingconnect.com

DO NOT APPLY FEET IF YOU WILL BE ROOF MOUNTING THE ANTENNA UNIT.

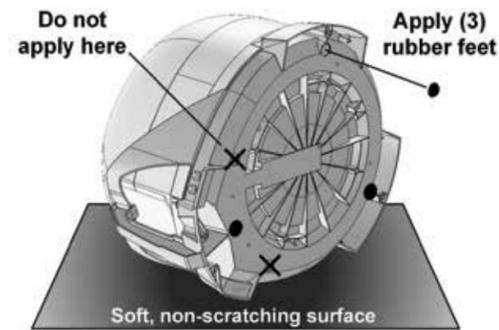


Lay the unit on a soft, non-scratching surface, and apply the (3) rubber feet.

STANDARD OPERATION (First Time Users see back)

Any tall objects can block the satellite signal.



- 1 Place KING Tailgater in position and make connections in the following order: **A**, **B**, and **C**.

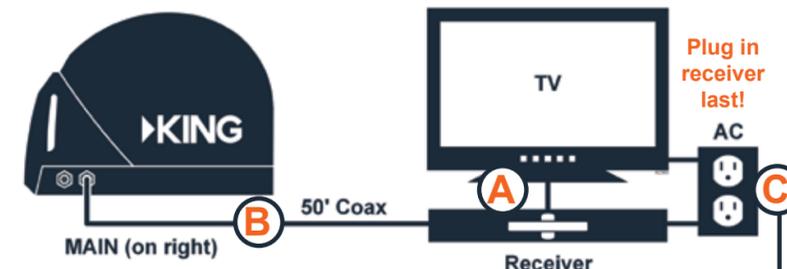

Do not over tighten coax connections! Do not pull on coax.

When you plug in the receiver, the green power light should illuminate or begin cycling on and off (if not, check AC connection).


Wait for the green light to turn solid. This may take up to two minutes.

If it does not turn solid, power on your receiver using the front panel POWER button. (On "z" models, this is located behind the door panel.)

- 2 Turn on your TV.

In your TV's input selection menu, choose the input that matches the connection from your receiver.

The *Mobile Antenna Setup* screen should display.

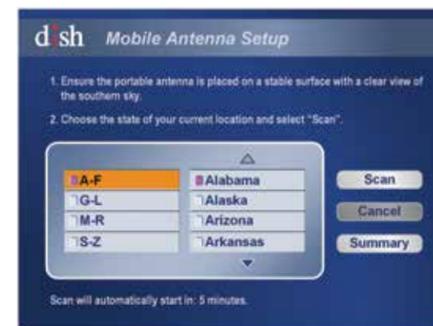

If the *Mobile Antenna Setup* screen does not display, press **MENU, 6, 1, 1** on your DISH remote.

Highlight "Check Switch." Press **SELECT** on your remote.




The *Mobile Antenna Setup* screen should now display.

- 3 Use the arrow buttons on your remote to highlight the letter group that includes the first letter of the state you are currently in.



Press **SELECT** on your remote.

- 4 Highlight the state you are currently in from the state menu.

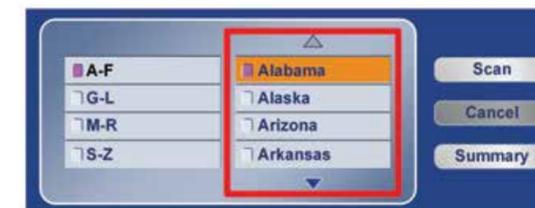

Press **SELECT** on your remote.


- 5 Verify "Scan" is highlighted.




Press **SELECT** on your remote.

The scan will begin and may take up to a few minutes to complete.


This screen will display during the scan.

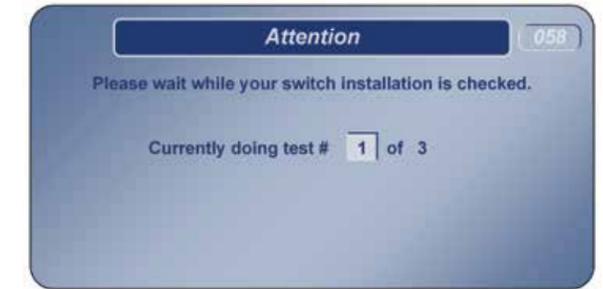

- 6 When the scan is complete, the *Acquiring Signal* message will display. Acquiring the signal may take up to 5 minutes to complete.

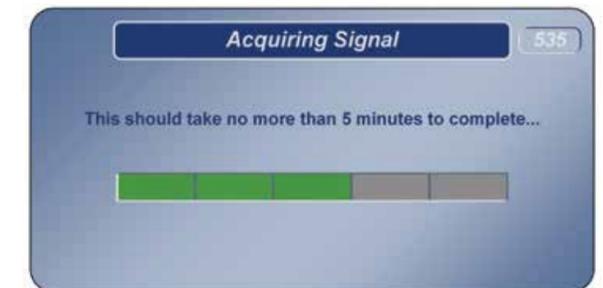

- 7 After your receiver has acquired the signal, the electronic program guide will download. This may take up to 5 minutes to complete (potentially longer if an external hard drive is connected).

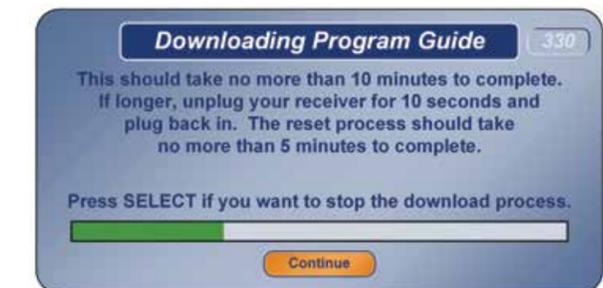

If you get a box saying that not all satellites were acquired, see the troubleshooting section in your Owner's Manual.

- 8 Choose a channel and watch TV. Enjoy!

For all things Tailgater,
see your Owner's Manual!


DISH and Tailgater are registered trademarks of DISH Network L.L.C.
KING is a registered trademark of Electronic Controlled Systems, Inc.

FIRST TIME USE

If your receiver is **NEW AND UNACTIVATED**, complete these steps first.


You only have to complete these steps one time. After completion, you can use **STANDARD OPERATION** on the front of this guide.

DO NOT APPLY FEET IF YOU WILL BE ROOF MOUNTING THE ANTENNA UNIT.

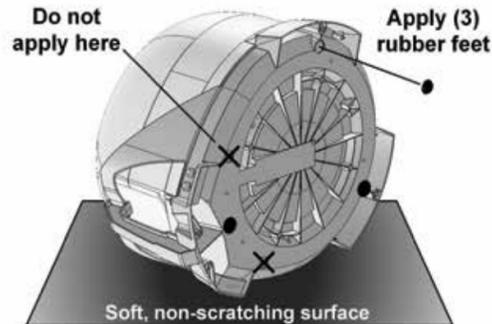


Lay the unit on a soft, non-scratching surface, and apply the (3) rubber feet.

Any tall objects can block the satellite signal.

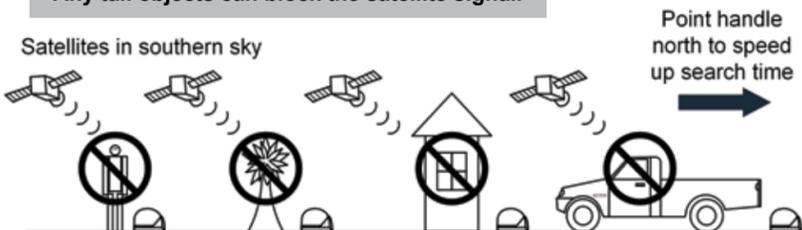

1 Place KING Tailgater in position and make connections in the following order: **A**, **B**, and **C**.

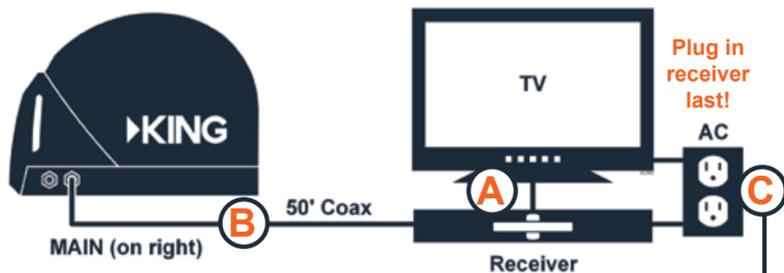

Do not over tighten coax connections! Do not pull on coax.

When you plug in the receiver, the green power light should illuminate or begin cycling on and off (if not, check AC connection).

Wait for the green light to turn solid. This may take up to two minutes.

If it does not turn solid, power on your receiver using the front panel **POWER** button. (On "z" models, this is located behind the door panel.)

2 Turn on your TV. In your TV's input selection menu, choose the input that matches the connection from your receiver.


3 Point your receiver's remote at the front of the receiver and press **SAT** and then press **RECORD**.




When a number appears in the box, verify "Continue" is highlighted.

Press **SELECT** on your remote.

The *Portable Antenna Setup* screen will display.

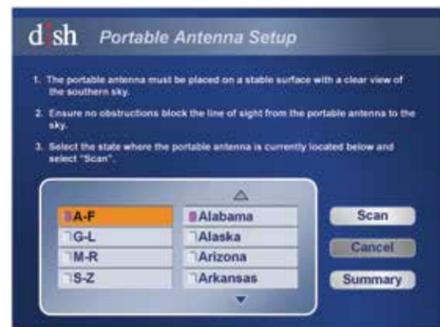

4 Use the arrow buttons on your remote to highlight the letter group that includes the first letter of the state you are currently in.

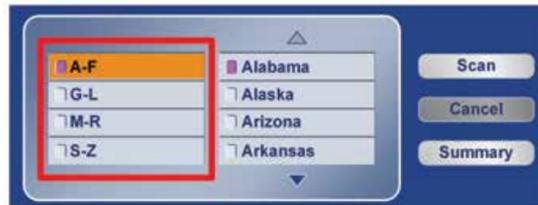

Press **SELECT** on your remote.

5 Highlight the state you are currently in from the state menu.



Press **SELECT** on your remote.


6 Verify "Scan" is highlighted.



Press **SELECT** on your remote.

The scan will begin and may take up to several minutes to complete.


The receiver will update software for DISH programming. This step may take 20-25 minutes.

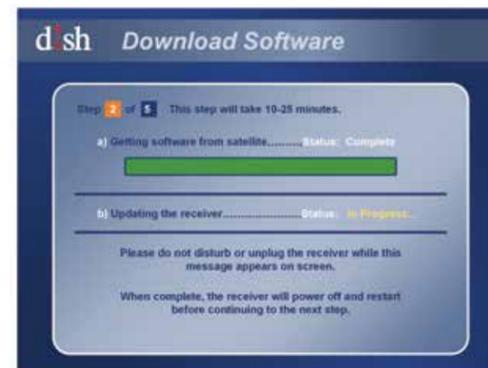

7 The receiver will reset and the *Mobile Antenna Setup* Screen will appear. Repeat steps 4-6 to initiate a second scan.



The antenna will scan a second time.

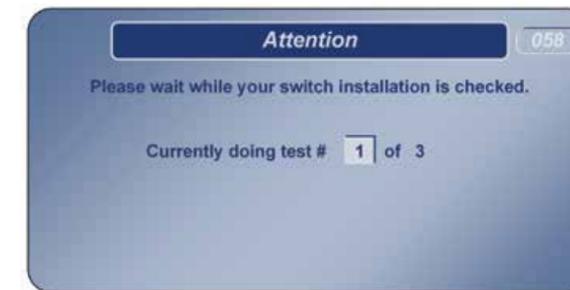


When the scan is complete, the "Acquiring Signal" message will display. Acquiring the signal may take up to 5 minutes to complete.



8 After your receiver has acquired the signal, it is ready to be activated. To activate service call **1-800-963-3474 (DISH)**.



After your receiver is activated, the electronic program guide will download. This may take up to 5 minutes to complete (potentially longer if an external hard drive is connected).

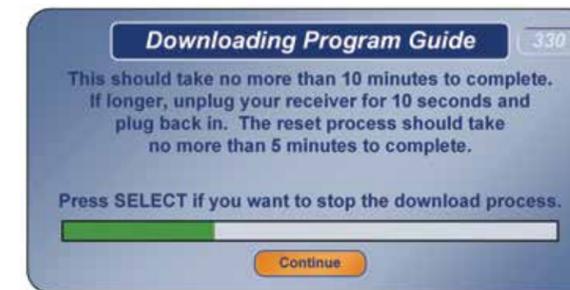

This completes the setup for new receivers.