




MUSTANG ICE COMMANDER ICE RESCUE SUIT

Model: **IC9001**
 Adult: **Universal**
 Body Weight: **110 - 330 lbs (50 - 150 kg)**
 Height: **4'11" - 6'6" (1.5 - 2.0 m)**

DONNING INSTRUCTIONS

1

Remove footwear, climb into suit. Pull on suit as coveralls. Use free hand to assist glove over opposite hand.

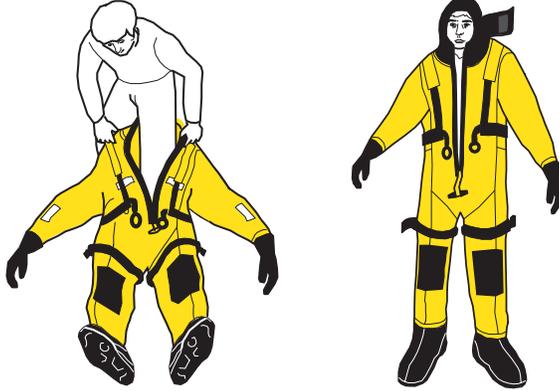

2

Hood on, tip head, pull up zipper by toggle.



3

Tighten thigh straps and wrist-strap cinches to fit.



4


Clip up harness before operating in the suit.



FOLDING INSTRUCTIONS

1

Lay the suit out flat. Unzip front zipper and unclip the safety harness.

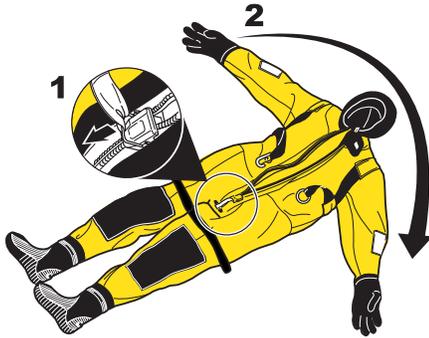

2

Grasping both boots at the top of the ankles fold them over.




3

Continue to:


1. Fold the ankles up to the waist.

2. & 3. Fold arms across the chest and roll the whole suit up.

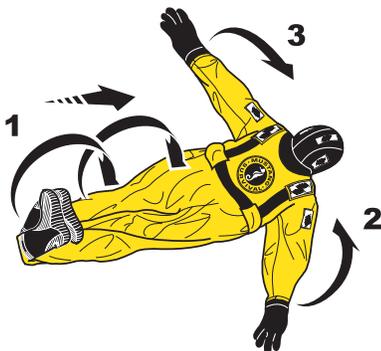

4

Insert folded suit into bag.

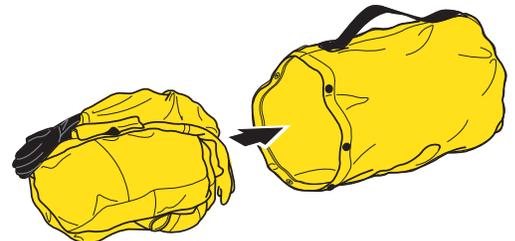

MUSTANG SURVIVAL - CANADA 3810 Jacombs Road, Richmond, BC, Canada V6V 1Y6
 TEL: 604.270.8631 FAX: 604.270.0489 WEB: www.mustangsurvival.com EMAIL: mustang@mustangsurvival.com

MUSTANG SURVIVAL - USA 3870 Mustang Way, Bellingham, WA, USA 98226
 TEL: 360.676.1782 FAX: 360.676.5014 WEB: www.mustangsurvival.com EMAIL: mustangusa@mustangsurvival.com

Model: IC9002 v02
 Adult: Universal
 Body Weight: 110 - 330 lbs (50 - 150 kg)
 Height: 4'11" - 6'7" (1.5 - 2.0 m)

MUSTANG SURVIVAL ICE COMMANDER IMMERSION SUIT



DONNING INSTRUCTIONS

1

Remove footwear, climb into suit. Use pull tabs at back of boot to assist donning. Pull on suit as coveralls. Use free hand to assist glove over opposite hand.



2

Hood on, tip head, pull zipper down by toggle. Secure zipper cover in place.



3

Tighten crotch strap, leg straps, and wrist-strap cinches to fit.




4

A. Clip up harness before operating in suit.




B. While squatting, grab face flap (red tab) and pull forward to release excess air from the suit (1). Secure face flap over face or off the face by matching hook and loop fasteners (2).

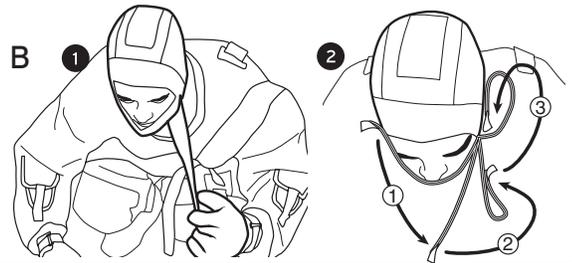

FOLDING INSTRUCTIONS

1

A. Lay the suit out flat. Unzip front zipper and unclip the safety harness.
B. Turn suit over so zipper faces down.

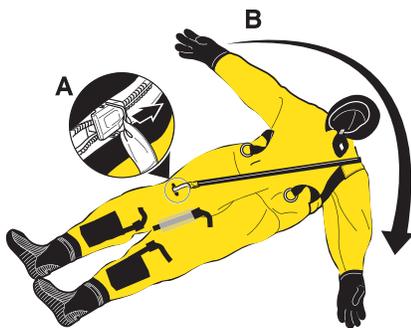

2


Grasp both boots at the top of the ankles, 2"-3" above the top of the boot, and fold them over.



3


Continue to:

A. Fold the ankles up to the waist.
B. & C. Fold arms across the back and roll the whole suit up.

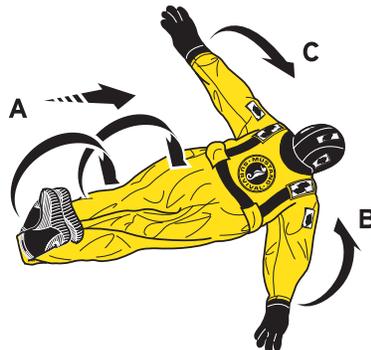

4

Insert folded suit into bag.

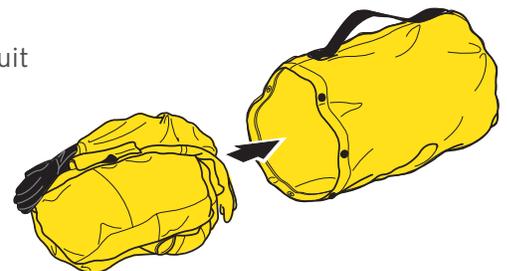



MAINTENANCE

ANNUAL INSPECTION

1. Unpack the suit and lay it out flat, separating the inside buoyant liner from the outside shell of the suit.
2. Inspect all areas of the suit for visible signs of damage or degradation. Also inspect for rips, tears, or small punctures.
3. Close and open zipper several times to check for smooth operation. Lubricate the inside and outside of the front waterproof zipper with lubricant after each use.
4. Ensure the harness webbing is not worn or abraded and the safety clip functions smoothly.
5. To store suit, always ensure your Ice Commander is fully dry prior to stowing in its stowage bag.
6. Replace inside buoyant liner by attaching to inside zipper and buckles along the shell front, neck, wrists, and inside boot.
7. Lay your suit face down and roll feet first to the head area, fold in the arms and continue to roll suit lengthwise with the zipper on the outside. Replace in stowage bag and always ensure that it is accessible in case of emergency.
8. Never compress your Ice Commander by placing heavy objects on top of it, as this could result in loss of buoyancy to the inside foam liner.

REPAIRS & REPLACEMENTS

1. Damage to both the external shell and inner buoyant liner can be repaired by an authorized Mustang repair station. Major tears, rips or punctures and chemical or heat burns must be inspected and repaired by the manufacturer.

CLEANING INSTRUCTIONS

1. To clean the Ice Commander Immersion suit, begin by removing the inside foam liner from the outer shell.
2. Remove salt and stains using a mild detergent in cold or warm water. Avoid scrubbing the patches of reflective tape. Do not use volatile fluids such as petroleum distillates to clean the suit as they will break down the welded material.
3. The inside foam liner can be handwashed with mild detergent and rinsed thoroughly with clean water, then hung to dry. The outer shell component should be cleaned in the same manner, stains can be cleaned by gently rubbing with a soft brush.
4. Do not dry clean.

ZIPPER CARE INSTRUCTIONS

1. Clean the zipper of any heavy deposits of mud, sand, salt or foreign substances using warm soapy water. Rinse, and let dry.
2. Apply a recommended lubricant to the outer elements of the zipper only.
3. Open and close the zipper TWICE, then store the unit with the zipper OPEN
4. A suit that is used daily requires steps 1 to 3 to be done on a weekly basis, as a minimum, paying close attention to more frequent cleaning of the zipper as required

Recommended Zipper Lubricants: Zip Tech by McNett, Ortlieb